



This manual describes how to configure your tool with P&A code to enable WIFI updates for Ford xRC3363


Step 1: Go to settings -> Info -> Factory reset

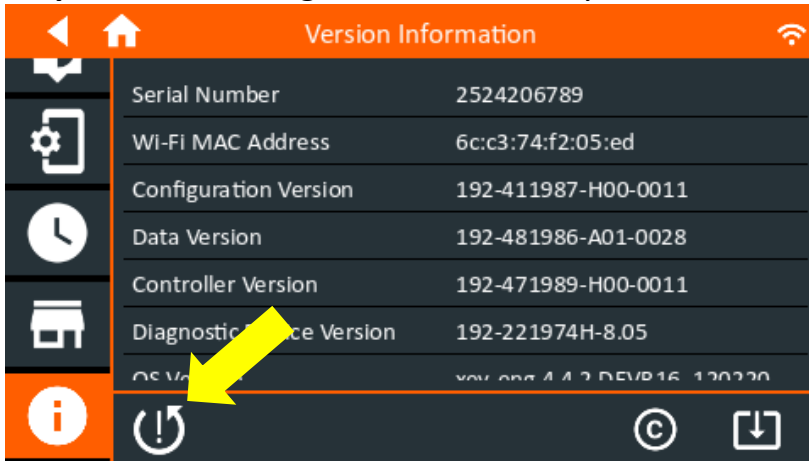

Step 2: Confirm factory settings

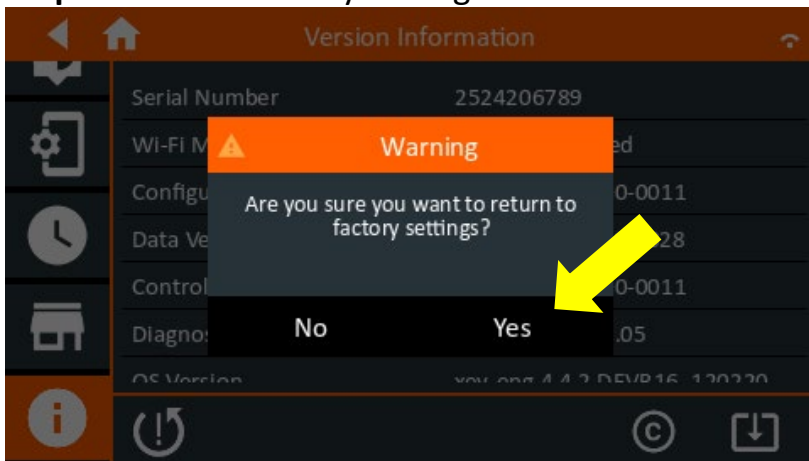

Step 3: **Warning:** Your tool will clear all history records and user settings

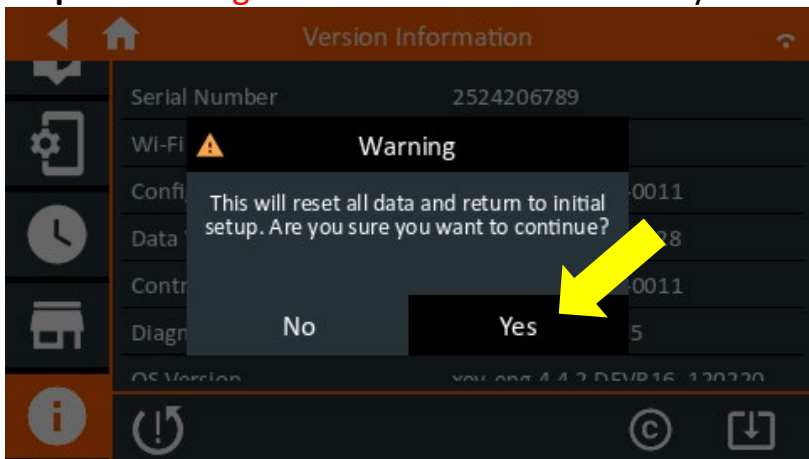

Step 4: Configure language settings and press next

Language Settings

System Language	English (US) ▾
Test Result Language	English (US) ▾
Email Language	English (US) ▾
Print Language	English (US) ▾

Next

Step 5: Ford dealer, select 'Yes'

Ford Selection

Are you a Ford dealership?

No Yes

Back

Step 6: Enter your name / ID


Create User

WSLX ID: _____


Next

Back

Step 7: Select date/time settings and press next

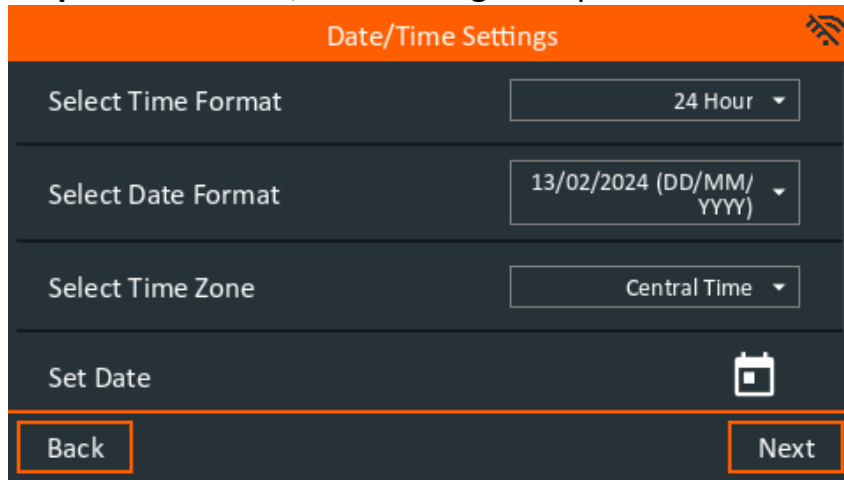


Step 8: Select test settings and press next

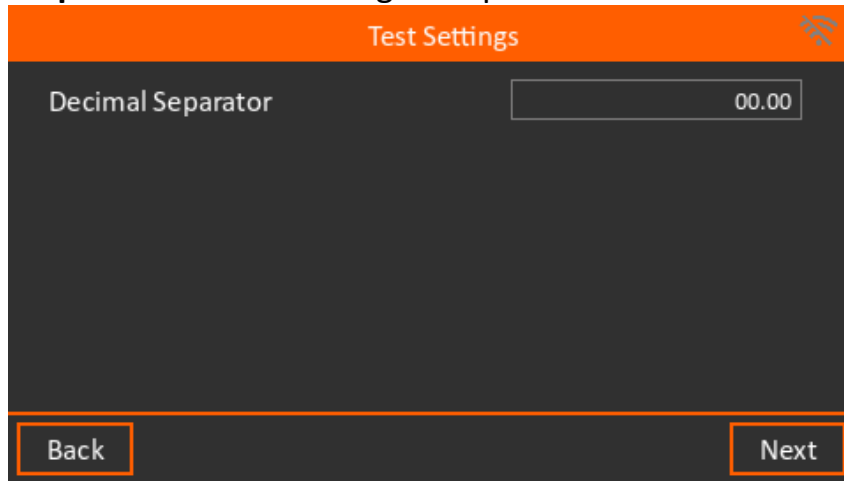


Step 9: Search and configure **active** WIFI network




Step 10: Location selection, enter 80001

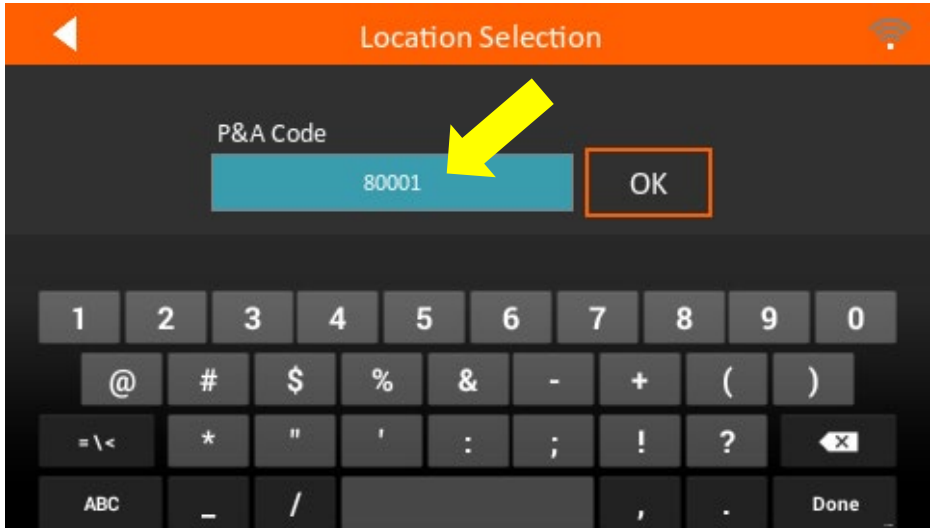


Step 11: Zipcode, enter 00000

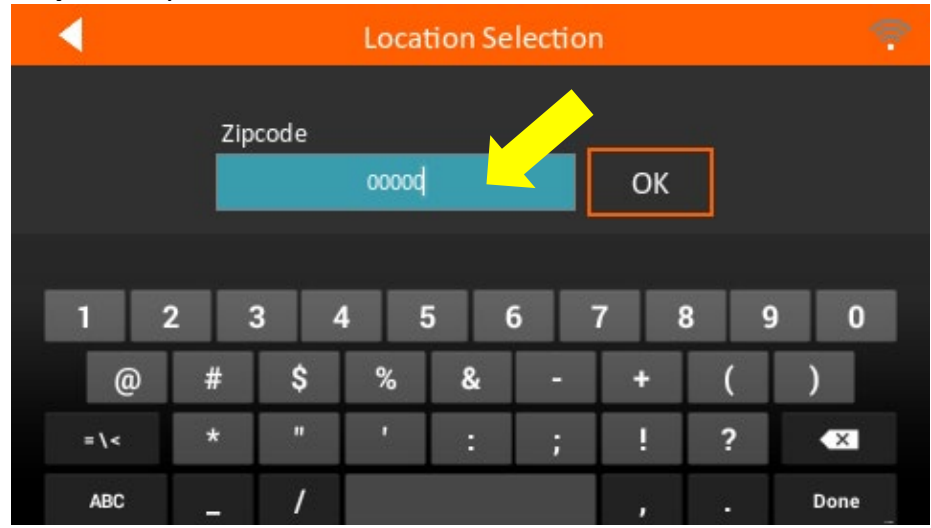

Step 12: Verify location

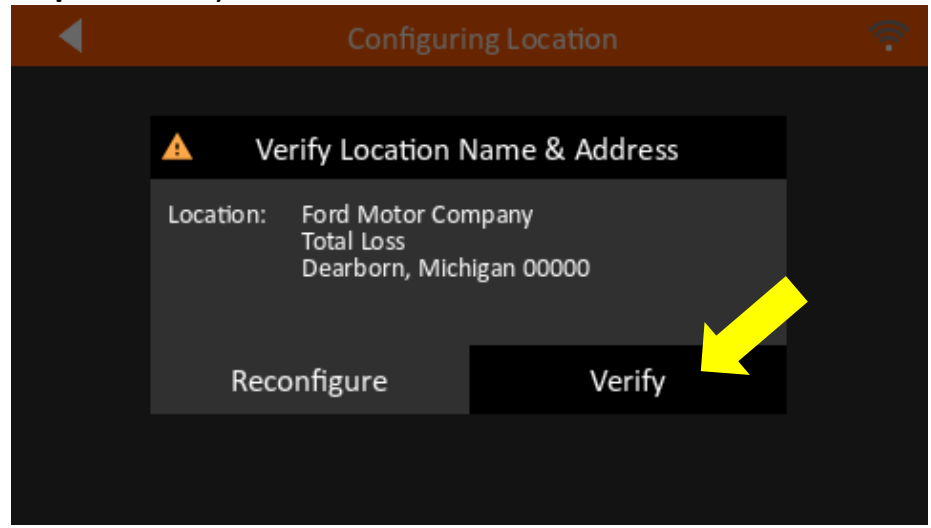

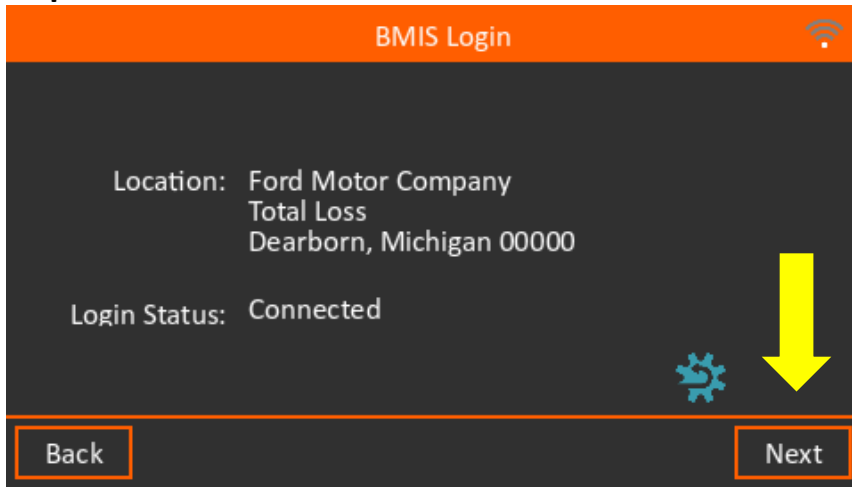Step 13: Confirm location

BMIS Login


Location: Ford Motor Company
Total Loss
Dearborn, Michigan 00000

Login Status: Connected

⚙️

Back Next

A yellow arrow points to the 'Next' button.

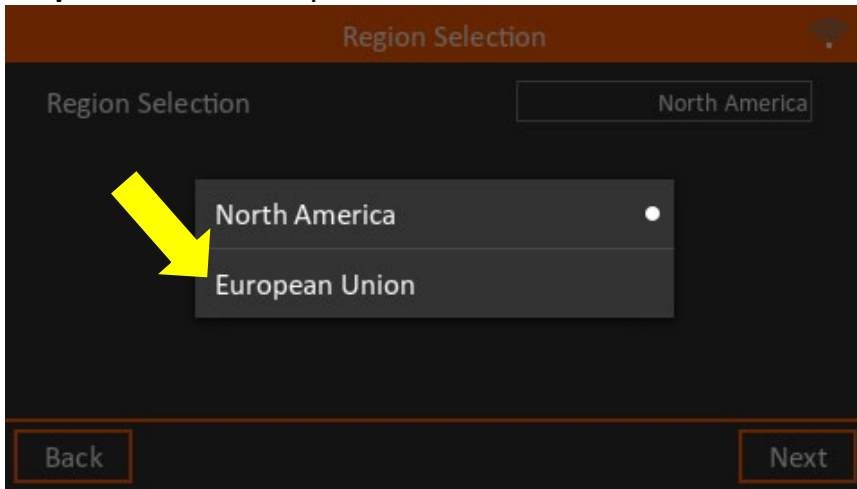Step 14: Select European Union

Region Selection


Region Selection North America

North America

European Union

Back Next

A yellow arrow points to the 'European Union' option in the dropdown menu.

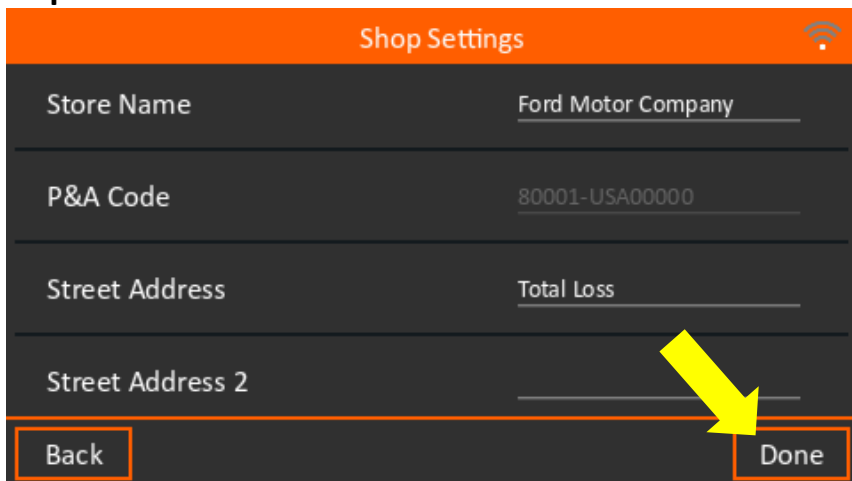Step 15: Press Done

Shop Settings

Store Name Ford Motor Company

P&A Code 80001-USA00000


Street Address Total Loss

Street Address 2

Back Done

A yellow arrow points to the 'Done' button.

Step 16: Log in by selecting user

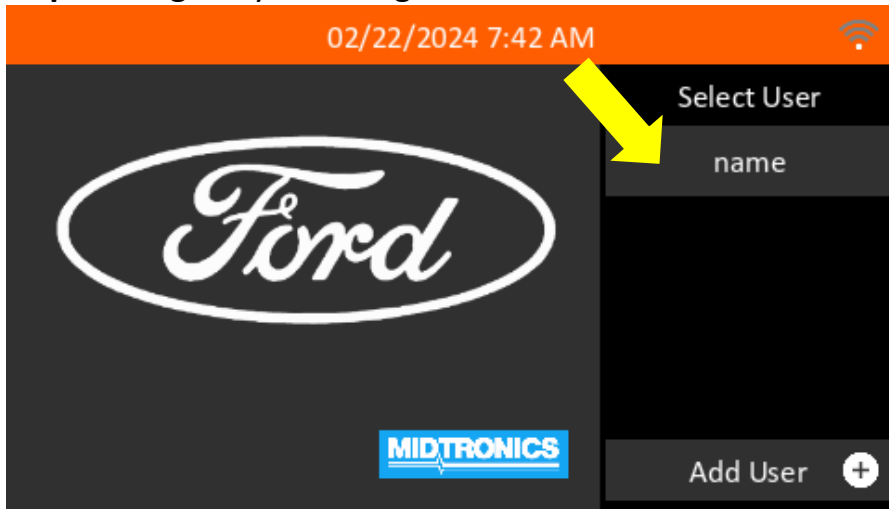

Step 17: Update should appear in main screen. Select messages and start update process

